

bug
scents
Sentry Pro 

BugScents™ Sentry Pro

Instruction guide





Assembly guide

Your BugScents Sentry Pro device is made up of three elements and the lure.

1. The top of the device, the **lid**, which has the word 'Lure' and 'Tab' on the inside
2. The bottom of the device, the **base**, which has the word 'Base' on the outside
3. The **glueboard** which has a removable cover on each side, and the words 'Attach this side to the device' and 'Tab' on the side that attaches to the device.

To assemble

- Place the parts of the device on a flat surface
- Peel the removable cover from the glueboard from the side labelled 'Attach this side to the device'
- Attach the glue board to the inside lid of the device. The lid has the words 'Lure' and 'Tab' on the inside
- Remove the sachet from the BugScents Attractant sealed bag. Do not open the sachet. Place the sachet in the central of the lid, in the sunken area.
- Peel the removeable cover from the glue board facing you. The other side should be stuck to the lid of the device
- Stick the inside of the base to the glueboard. The outside of the base is labelled with the word 'Base', you should be able to see this word when the base is stuck to the glue board.
- Push down until you hear a 'click'. Now the lid and base are attached with the glueboard and attractant sachet in the middle.
- Turn the device over so the base is on the bottom. The device is now ready to use.

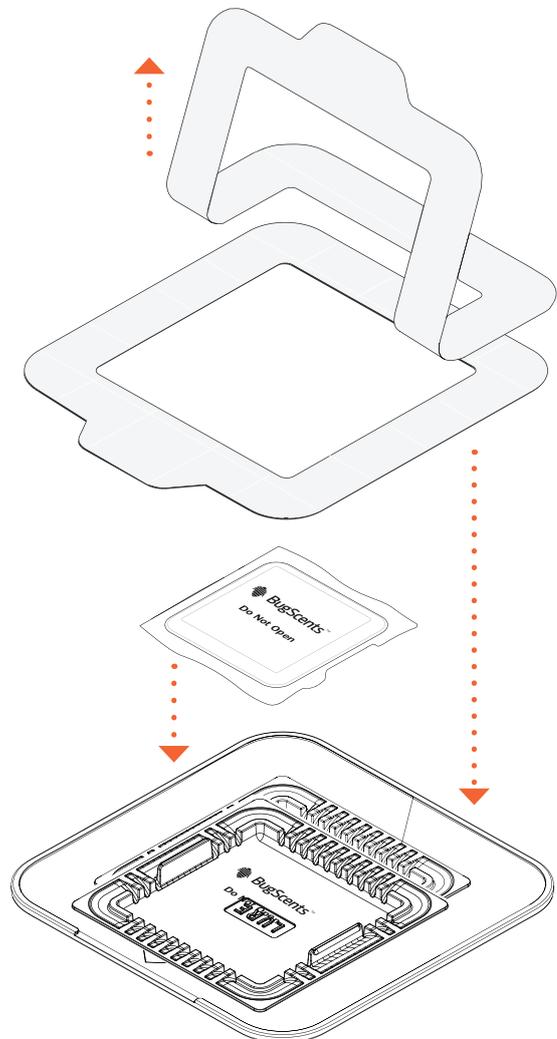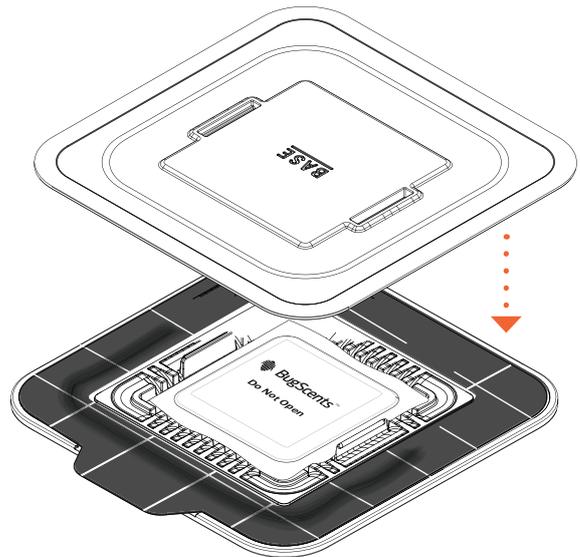

How to use your BugScents Sentry Pro

Placement

For the quickest and most effective detection, place the devices under the bed, on the floor, at the pillow end. If this is not possible, place the device as close to the head of the bed as possible.

Uses

- Your BugScents Sentry Pro device is for monitoring and detection only.
- The device is not a treatment for bed bugs.
- The device works best when the infestation is at an early stage, and low numbers of bed bugs. It works less well when there are lots of bed bugs due to competing pheromone from their natural hiding places (by which time bed bugs should be visible anyway, and the monitoring trap is not required).
- One device is recommended for a single bed, two for a double bed.
- **For detection:** place the device at the head of the bed and wait 72 hours before checking.
- **To check an infestation has been treated successfully:** place the device at the pillow end of the bed 72 hours after treatment. Do not use a device that has been in contact with insecticides, this vastly decreases the efficacy of detection.
- **On-going monitoring:** place the device at the head of the bed and wait 72 hours before checking. The device can be checked daily, weekly, monthly or quarterly to suit your needs.. The glueboard and sachet must be replaced every three months to ensure efficacy is maintained.
- **To replace the glueboard and sachet:** separate the lid and base, peel off and dispose of the glueboard, and remove the sachet. Follow the assembly instructions above to replace the glueboard and sachet in the existing device.

